

# ST-1212FP 12\*12W RGB LED Par Light Manual



## KEYS INSTRUCTION



## DMX MODE

3 Channels Mode

Channel	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
CH3	B Dimmer	Dimmer- Dark to Bright

7 Channels Mode

Channel	Function	Instruction
CH1	Total Dimmer	RGB Total Dimmer- Dark to Bright
CH2	R Dimmer	Red Dimmer- Dark to Bright
CH3	G Dimmer	Green Dimmer- Dark to Bright
CH4	B Dimmer	Blue Dimmer- Dark to Bright
CH5	Total Strobe	1# 2# 3# Total Flash Strobe- Slow to Fast
CH6	Function Choice	000~050: CH1-CH5Control. 051~100: Different Colors output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH7	Function/Speed	Slow to Fast (At the Colors output choose the color)

## DIGITAL SHOW FUNCTION FORM

No	Show	Function	Value	Instruction
2	<b>A001</b>	DMX address	001~512	7CH mode UP,DOWN increase or reduce the value
1	<b>d001</b>	DMX address	001~512	3CH mode,UP,DOWN increase or reduce the value,
3	<b>r255</b>	R Dimmer	000~255	UP,DOWN Change brightness
4	<b>G255</b>	G Dimmer	000~255	UP,DOWN Change brightness
5	<b>b255</b>	B Dimmer	000~255	UP,DOWN Change brightness
6	<b>F255</b>	Strobe	010 ~ 255	UP,DOWN change the speed
7	<b>CC15</b>	Colors Jump	00 ~ 15	UP,DOWN change the speed
9	<b>DE15</b>	Colors Gradate	00 ~ 15	UP,DOWN change the speed
10	<b>CP15</b>	Colors Pulse	00 ~ 15	UP,DOWN change the speed
11	<b>SoUd</b>	Colors	/	Sound-Active